

Installation Guide

DEVIreg[™] 610

Electronic Thermostat



DEVIreg[™] 610



| Tal | ble | of | Contents | |
|-----|-----|----|----------|--|
| | | | | |

| 1 | Introduction | |
|---|------------------------------|----|
| | 1.1 Technical Specifications | 4 |
| | 1.2 Safety Instructions | |
| 2 | Mounting Instructions | 6 |
| 3 | Warranty | 11 |
| 4 | Disposal Instruction | 11 |
| | ludus du disso | |

1 Introduction

DEVIreg™ 610 is an electronic thermostat to be installed directly on the wall. It is provided with a 2-pole switch and a wire sensor to control the desired temperature.

The thermostat has a button for adjusting the temperature setting with a scale from -10° to +50°C, and an LED indicator that shows standby periods (green light) and heating periods (red light).

More information on this product can also be found at: devireg.devi.com

Installation Guide 3



1.1 Technical Specifications

| Operation voltage | 220-240V~, 50Hz | |
|----------------------------------|--|--|
| Standby power consumption | Max. 0.93W | |
| Relay: | | |
| Resistive load Inductive load | Max 10A / 2300W @ 230V cos φ= 0.3 max 1A | |
| Sensing units | NTC 15kOhm at 25°C | |
| Sensing values: | | |
| 0°C 25°C 50°C | 42kOhm 15kOhm 6kOhm | |
| Hysteresis | ± 0.2°C | |
| Ambient temperature | -30°C to +50°C | |
| Temperature range | -10°C to +50°C | |
| Cable specification max | 1x4mm ² or 2x2,5mm ² | |
| Ball pressure temperature | 75°C | |
| Pollution degree | 2 (domestic use) | |
| Туре | 1C | |
| Storage temperature | -20°C to +65°C | |
| IP class | 44 | |
| Protection class | Class II - 🗆 | |



| Dimensions | 100 x 69.5 x 45mm |
|------------|-------------------|
| Weight | 165g |

The product complies with the EN/IEC Standard "Automatic electrical controls for household and similar use":

- EN/IEC 60730-1 (general)
- EN/IEC 60730-2-9 (thermostat)

1.2 Safety Instructions

Make sure the mains supply to the thermostat is turned off before installation

Please also note the following:

- The installation of the thermostat must be done by an authorized and qualified installer according to local regulations.
- The thermostat must be connected to a power supply via an all-pole disconnection switch.
- The sensor is to be considered as live voltage. Have this in mind if the sensor must be extended.
- Always connect the thermostat to continuous power supply.
- Do not expose the thermostat to moisture, water, dust, and excessive heat.

Installation Guide 5



2 Mounting Instructions

Please observe the following placement guidelines:

- The thermostat can be placed both indoors and outdoors.
- Place the thermostat on a wall, pole, steel/wooden plate or pipe.



In wet rooms, place the thermostat according to local regulation on IP classes.



Follow the steps below to mount the thermostat:

1. Open the thermostat:



- Set adjustment button to minimum temperature.
- Loosen the 2 screws and open the front cover.




2. Fasten the thermostat:



- Drive the screws through the holes in the bottom corners of the thermostat.
- Seal the holes with the enclosed screw stopper to maintain the density.



Connect the thermostat according to the connection diagram.

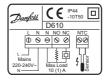

- <u>Heating</u>: (L-main, N-main, L-load, NO (normally open)
 load).
- <u>Cooling</u>: (L-main, N-main, L-load, NC (normally closed) - load).

The screen of the heating cable must be connected to the earth conductor of the power supply cable by using a separate connector.

- 4. Reinstall the front cover.
- Ensure that the adjustment button can be adjusted within full temperature range, i.e. from -10°C to +50°C.

Installation Guide 9



- Install sensor using the supplied sensor cable spec. NTC 15 kΩ @ 25°C.
 - Press out the blanket located at the bottom of the thermostat and insert the seal nipple.
 - Connect sensor to terminals 6+7.

The sensor cable can be extended up to 50 m with 1.5 mm² installation cable without affecting the accuracy of the thermostat

Do not place the cable parallel to other installation cables as undesirable signals may be induced.

The installation must be permanent.

If the sensor is to be built in, used for pipe applications, or exposed to pressure, always install it in a conduit.

7. Turn on the power supply.



3 Warranty



4 Disposal Instruction












Danfoss A/S
Electric Heating Systems
Ulvehavevej 61
7100 Vejle
Denmark
Phone: +45 7488 8500
Fax: +45 7488 8501
E-mail: EH@DEVI.com

Durfors can accept no responsibility for possible errors in catalogues, brochures and other printed material. Durfors reserves the right or other its products without notice. This also applies to products a livent or notice. This also applies to products a livent or notice. This also applies to products a livent or notice. The also applies to product a livent or notice and the surface products without products and the product of the product and the product of the product of the respective companies. DEVI and the DEVI logotype are trademarks of Durfors ASF. All rights reserved.

www.DFVI.com

DEVIreg 610 IP44 140F1080

50-60Hz~ -10 to +50°C 10A/2300W@230V~ 220-240V~

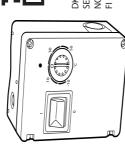



DK EL 7224215344

SE EL 8581196 NO EL 5491490 FI SSTL 3531041

Designed in Denmark for Danfoss A/S















